







There are over 12,000 C-130 aircraft worldwide. Each uses four powerful turboprop engines, and additional spare engines are typically stored nearby.


When left unused, the engine's gas paths become susceptible to corrosion and contamination that cause damage or destruction.

Heritage Packaging designed and developed the cover systems that preserve the engine gas path without the need to run the engines- a costly and time-consuming process.

Choose from individual part numbers or a kit (see reverse).

625 Fishers Run, Victor, New York 14564 Phone: (585) 742-3310 | Fax: (585) 742-3311 Cage Code: 1RWT6 | UEI: W2D4Y621KBL6 www.heritagepackaging.com

sales@heritagepackaging.com

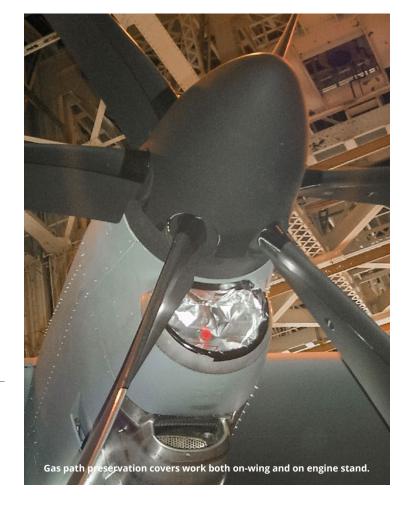

Individual Part Numbers



Intake Cover, with hole *Valve not included*

Part Number: IC/CEPAC MP5011 NSN: 1680015868777



Intake Cover, without hole

Valve not included

Part Number: IC/CEPAC MP5011-NH




Exhaust Cover, with hole

Valve not included

Part Number: EC/CEPAC MP5012

NSN: 1680015868778

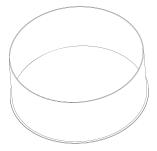

Intake Cover, without hole

Valve not included

Part Number: EC/CEPAC MP5012-NH




Desi Paks in Barrier Bag

Barrier Bag containing 6,16 unit Desi Paks

Part Number: BD/6x16

Preservation Kits

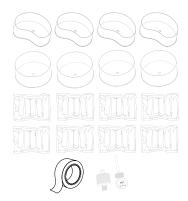


Kit 1

Part Number: 3404062-1

Includes:

- 4 Intake Covers with holes, valves installed
- 4 Exhaust Covers with holes, valves installed
- 1 Thermo-Hygrometer Kit
- 8 Barrier Bags containing 6,16 unit Desi Paks
- 1 Roll of black non-corrosive tape, 3" wide

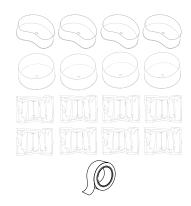


Kit 3

Part Number: 3404062-3

Includes:

- ullet 4 Intake Covers with holes, valves installed
- 4 Exhaust Covers with holes, valves installed
- 8 Barrier Bags containing 6,16 unit Desi Paks
- 1 Roll of black non-corrosive tape, 3" wide

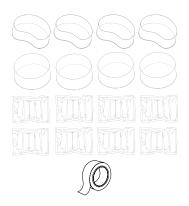

Kit 5

Part Number: 3404062-5

Includes:

- 4 Intake Covers without holes, valves not included
- 4 Exhaust Covers without holes, valves not included
- 8 Barrier Bags containing 6,16 unit Desi Paks
- 1 Roll of Black Non-Corrosive tape, 3" wide